


脚踏遥控器使用说明

Foot control manual

1 主要部件说明

Product's features

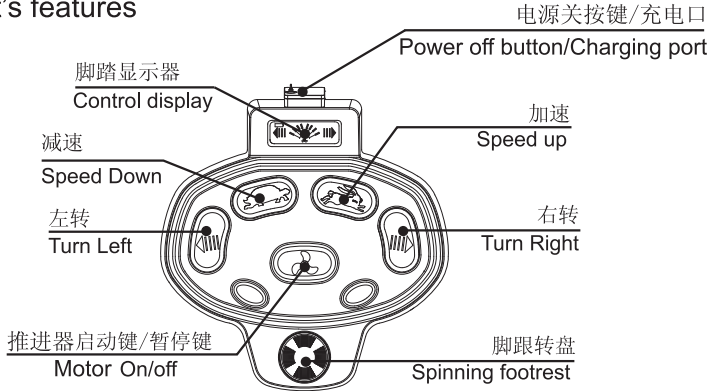


2 遥控器与推进器的连接



Foot control connection





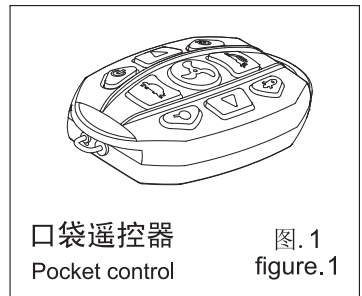


脚踏遥控器与推进器配对前，必须口袋遥控器（如图.1）与推进器先行配对。否则，脚踏遥控器与推进器无法配对！

Before pairing the foot control, make sure pairing the pocket control with the motor first. (figure. 1)



同时长按推进器的  键与脚踏遥控器  键，脚踏显示屏弹出字母“A”，约在“3秒”内听到推进器发出连续“嘀嘀嘀”响声“3”声，代表脚踏遥控器与推进器配对成功。（如图.2）


Press and hold  below the power reader (figure.2) then press and hold  on the foot control to set-up the pairing, “3 beep” indicate connection established, release  and  both the system is now ready.

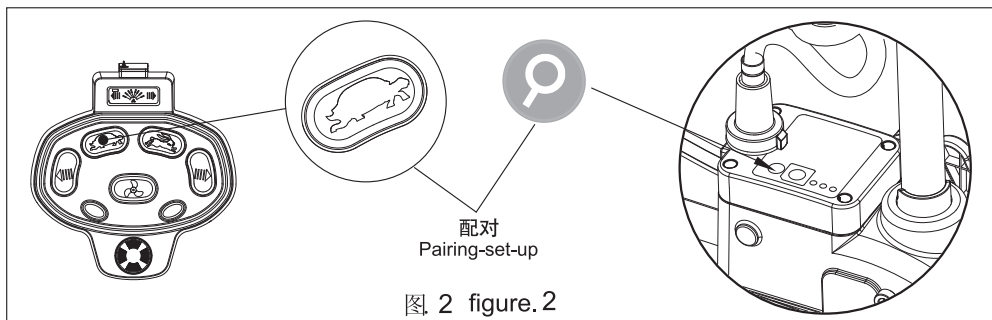

3 脚踏显示器 Control display

在使用脚踏控制器时，按每一个键相对的功能都会显示在脚踏显示器上。（如图.3）


Indication of function will be shown on the control display when pressing the key.(figure.3)

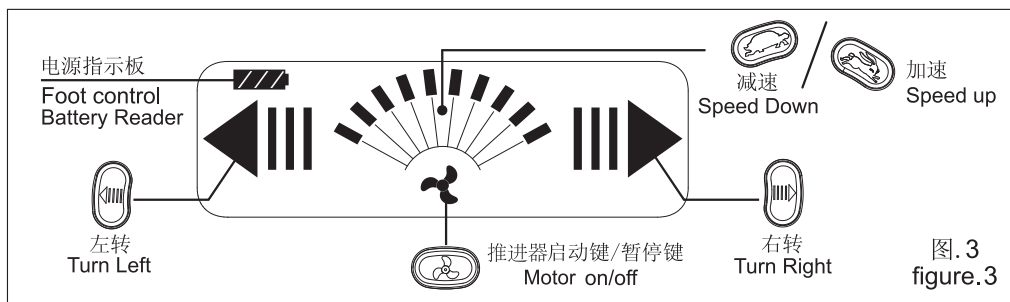


4 操控推进器的速度 Speed control

首先按一下 键激活推进器“蜂鸣器短滴一声”，按 或 键来调节推进器的航速“蜂鸣器短滴一声”。如要停止推进再按一下 键取消推进“蜂鸣器短滴二声”。(如图.4)

Press to activate the motor "1 beep".press or to adjust the trolling speed "1 beep". to stop the motor by pressing to cancel "2 beep" .(figure.4)

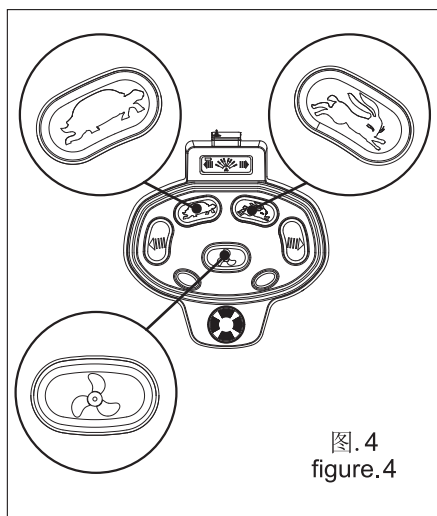

5 操控推进器的转向 Turning the trolling motor

按一下  或  键时推进器会按照对应的命令转向（如图.5）

Press  or  to turn the motor left or right (figure.5)

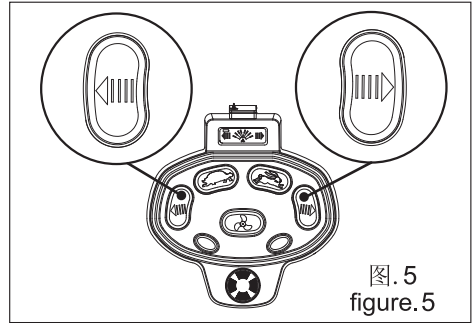


图.5
figure.5

6 脚踏控制器的操作方式 Foot control operation

将脚跟放在脚跟转盘上，用脚尖触按脚踏按钮，并利用转盘转换脚尖的位置。（如图.6）

Pressing the key on the foot control by the toe, and using footrest to change the toe position.(figure.6)

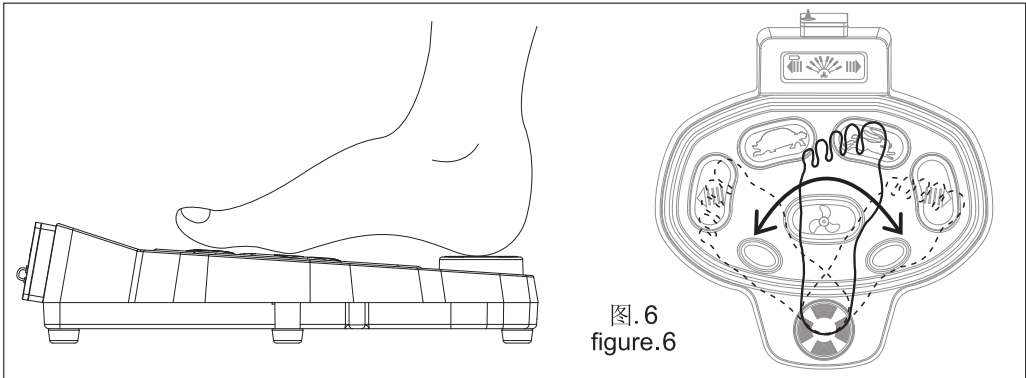


图.6
figure.6

7 脚踏遥控器充电方法及注意事项 Foot control charging method

1. 拉开脚踏遥控器末端防水塞，插上USB充电线，充电线红灯亮表示充电中，绿灯亮表示充电完毕，如果灯不亮表示充电异常，可更换充电电源或者用移动电源充电。
 2. 脚踏遥控器电量饱和时可以连续使用约10小时，建议外出游玩时携带移动电源！（如图.7）
1. Pull out water proof plug, connect USB charging cable, red light indicates charging, green light indicates charging is completed, if the lamp does not light indicates the charging is abnormal, replace the charging source or charging with a mobile power.