USER MANUAL QUICK INSTALLATION GUIDE MGR350B











BLUETOOTH® ENABLED GAUGE HOLE RADIO

FEATURING ZERO STANDBY CURRENT DRAIN

USER MANUAL QUICK INSTALLATION GUIDE

MGR350B

BLUETOOTH® GAUGE HOLE RADIO

iPod® and iPhone® are registered trademarks of Apple Inc. registered in the USA and other countries. BOSS Audio Systems is not affiliated with Apple Inc.



BOSS Audio Systems 3451 Lunar Court • Oxnard, CA 93030





Thank you for purchasing this

 
3077

MGR350B Bluetooth Gauge Hole Radio Please read thorough these instructions carefully so you will know how to operate

your model properly.

After you have finished reading the instructions, keep this document in a safe place for future reference.

THIS PACKAGE CONTAINS



(8pcs)

Thank You Card Facebook Card (1nc) (1pc)

INFORMATION TO THE USER

Bluetooth

User Manual

(1nc)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Warranty Card

(1nc)

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. The Bluetooth antenna cannot be removed (or replaced) by user. This equipment complies with FCC/ IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles). Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate or reorient the receiving antenna.
 Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

!! WARNING !!

ADJUSTMENT OR ALTERATIONS OF THIS DEVICE MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

IMPORTANT SAFETY PRECAUTIONS

BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:

- Do not turn up the volume so high that you can't hear what's around vou
- · Use caution or temporarily discontinue use in potentially hazardous situations
- Do not operate mobile video equipment while driving a motorized vehicle - safe driving and safety consideration of others should always be your highest priority.
- · Set your volume control at a low setting, then slowly increase the sound until you can hear it comfortably without distortion, or ear
- In the event you should notice smoke, strange noises or odor from this product, or any other abnormal signs, immediately turn off the power and consult your dealer or the nearest authorized BOSS AUDIO Service Center Using this product in this condition may result in permanent damage to the system.

1 Make the mounting hole size as follows

4 Slip the unit through the hole cutout and into U-bracket

6 Secure and waterproof the wiring

SUGGESTED MOUNTING METHODS

Install studs mounts into rear of chassi

Snan off break-away tabs to best fit

your applications depth

BEFORE YOU START

INSTALLATION PRECAUTIONS

Always consult with a professional installer

CAUTION!!

Using other mounting methods may void

this warranty

Adjust M4 nuts for the best mounting deptl

- · Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without professional training and experience in electronic equipment and motorized vehicle accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards
- Refer any repairs to a qualified BOSS AUDIO SYSTEMS Service
- The MGR350B should be wired directly to a vehicles battery When wiring directly to the vehicles battery, be sure to disconnect
- the batteries negative terminal wire before starting any wiring procedures, if extending the main power primary wire, it is suggested that an optional fuse and fuse holder (not included) with minimum rating of 20 Amperes be in-line with the positive battery • The ground cable length should be as short as possible. if
- extending from you battery, be sure to use a proper gauge rating for the length of the run, use only high quality copper primary type wire
- The MGR350B has a IPX6 weather resistant design, it should not be submerged in or under water under any circumstances
- · Do not use abrasive cleaning materials on the lens or bezel Use only the installation parts provided with the MGR350B

To avoid potential shorts in the electrical system, be sure to disconnect the (-) battery cable before installation. Use this unit with a 12-Volt battery and negative grounding only. Failure to do so may result in a fire or malfunction



WIRE DIAGRAM


When replacing the fuse, be sure to only use a fuse of the rating specified on this product. To avoid short-circuiting, cover any disconnected leads with insulating tape. It is specially impor-

tant to insulate any unused wires, which if left uncovered may cause a short circuit. When connecting other devices to this product, refer to the manual for the product to be connected. The black cable is ground. make sure to connect the ground wire first.

Ensure that the ground cable is properly connected to metal parts of the vehicles body frame or direct to the battery if your vehicle does not have a grounded chassis frame. The ground cable of this units power amp and a second powered system must be connected to the frame separately with different screws. If the screw for the ground wire loosens or falls out, it could result in fire or malfunction.

TROUBLE SHOOTING GUIDE

TROUBLE	CAUSE	SOLUTION
	The fuse is blown	Check / replace the fuse
Unit will not turn on	Ignition not engaged	Turn ignition to on position
	Blown speaker	Replace faulty speaker
	Volume is low / muted	Press the volume level up
No sound is heard	Device is paused or muted	Check your devices playing / volume status
	The Bluetooth function of the device is not enabled	Refer to the user manual of the device for how to enable the Bluetooth function
Cannot pair Bluetooth	The MGR350B BT memory is full	Follow how to reconnect a device in section E
The audio quality is poor after connection with a Bluetooth enabled device	The Bluetooth reception is poor	Move the device closer to the audio system or remove any obstacle between the device and the systems antenna
Unit has become unresponsive	Power glitch or interference	Disconnect power for 10 seconds to reset
	Low battery power	Charge battery, run the engine to recharge the battery
	Reset the main system	Follow steps in section B

 

SPECIFICATIONS

MOSFET

Class: AB

• 40 stable

FM TUNER FREQUENCY RANGE

USA 87.5~107.9MHz

• Europe 87.5~108MHz Asia 87.5~108MHz

Australia 87.5~108MHz Usable Sensitivity: 12dB (S/N=30dB)

Bands: 2

AM TUNER FREQUENCY RANGE

• USA 530~1710KHz • Europe 522~1620KHz • Asia 522~1620KHz

 Australia 522~1620KHz Usable Sensitivity: 40dB (S/N=20dB)

WEATHER BAND SELECTION • CH.1 162.400MHz

 CH.2 162.425MHz CH 3 162 450MHz · CH.4 162.475MHz

• CH 6 162 525MHz CH 7 162 550MHz

Bands: 1 BI LIFTOOTH

BT Range: 33Ft / 10M (Class 2)

BT Profiles: A2DP / AVRCP 1.3

USB DRIVE MEDIA SUPPORTED

• WMA


• 65,000 Songs • 32GB / FAT 32


USB 2.0 High Speed

USB Output Voltage: 5VDC @ 1A

Specifications subject to change without notice

QUICK START GUIDE

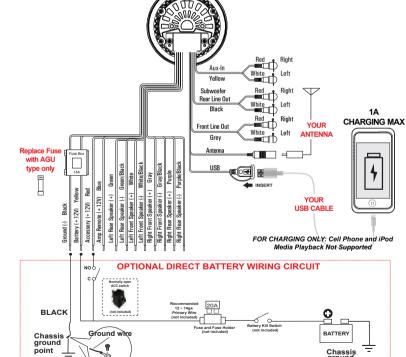

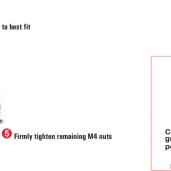






 CAUTION!! Do not ground or short the speaker leads





 Button Backlight Illumination: BLUE LED
 F/R/S RCA Preamp Output: 2VRMS RCA Input Impedance: 10kΩ · LCD: TN Type / Active Matrix

INTEGRATED AMPLIFIER

Power Source: 14.4VDC (10.8V ~ 16V allowable) Grounding System: Negative type

Maximum Current Consumption: 15A · 3-way protection circuitry (thermal, overload and speaker short protection

Unit Weight: 1.08lbs / 0.52kg

• Storage Temperature: -22°F to 176°F / -30°C to 80°C

-4°F to 158°F / -20°C to 70°C

(Replace with ATG Fuse Type Only)

Replacement Fuse: 15A

GETTING STARTED



SOURCE MODES






Press to pause. Press again to resume playback. Tuner/Weather Band Mode: Press to enter into the Manual Seek mode press and hold to enter into the Auto Seek mode. Media Playback Mode: Press to TrackUp/Down, press and hold for Fast Forward/Rewind. Press to scroll and select available Source. PRESET Press to scroll and select Presets 1 ~ 6 Press and hold to enter into the Tuner Function modes: A-STORE / M-STORE / LOCAL / AREA / RDS / AF / TA / PTY Press to decrease the volume, press to increase the volume. Tuner/Weather Band Mode: To change different Band. Press and hold to access into Auto Store mode, the strongest stations of the selected band will be saved in preset channel automatically, FM1, FM2, AM1, WB1 Media Playback Mode: Press to access into search Folder/File music mode • Tuner Mode: Press to view RDS receiver information. ENTER Media Playhack: Press to view ID3 information. Press to access into the Audio Menu mode for adjustment EO / XBASS / BASS / MIDDLE / TREBLE / BALANCE / FADER / REAROUT / SUBW / SUBW LPF / SUBW LEVEL Press and hold to access into the System Menu: BT RECONNECT / BEEP ON/OFF / ABOUT / RESET

Turn the unit on Press and hold again to turn the unit off

All rights reserved. No part of this publication may be reproduced, distributed, or tra form or by any means, including photocopying, recording, or other electronic or me without the prior written permission of BOSS AUDIO SYSTEMS Inc.

TUNER SETUP




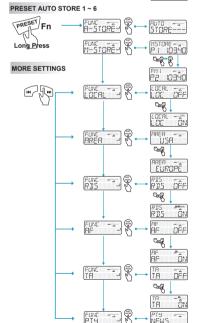


0		62	Exit
Long Press for FUNCTION option	Navigate Main s System Tree	Press ENTER to select option	To select through FUNCTION options
Media Playback Mode	Selecta	ble settings	
Repeat	ALL: to repeat all tracks on the storage media Song: the current track will be repeated Folder: repeats all tracks in the current folder		
Random On/Off	This function allows you to play tracks/songs from the current album, songs or artists in a random order.		
Tuner Mode	Selectable settings		
Auto Store	Press to access into A-STORE mode, the strongest stations of the selected band will be saved in FM 1 or FM 2, AM 1 BAND presets automatically		
Manual Store	When a desired radio station is set, press M-STORE to savit in the memory, you can store a total of 12 FM or 6 AM.		
Local On/Off	ON: only stations with strong signal can be broadcast. The Local indicator will light up OFF: Stations of both strong and weak signals can be broadcast.		
Area	Select suitable country area for this unit: USA / EUROPE / ASIA / AUST		
RDS On/Off	Turn On or Off the RDS function.		
AF On/off	ON: The unit will search for another station with stronger signal, but with the same program identification as the current station automatically. OFF: Turn off AF function		
TA On/off	current modé) a on traffic condit	vitch to the tune nd begins to broa ions. When the to stomatically retur	r mode (regardless of the dcast the announcement raffic announcement is n to the previous mode.
PTY →	item, and rotat enc Available Prop POP M; ROCK OTHER M; JAZ M; FOLK M; A- SPORT; EDUC VARIED; WEAT	oder volume kno gram Type: M; EASY M; 27 M; COUNTRY fest; Alarm; N ATE; Drama; Ther; Finance	e get into program type b to selected category. LIGHT M; CLASSICS; (; NATION M; OLDIES IEWS; AFFAIRS; INFO; CULTURE; SCIENCE; ; CHILDREN; SOCIAL; LEISURE; DOCUMENT

ransmitted in any echanical methods,
→ 8
Exit ough tions
ttons
ia
er
rom the er.
gest ·M 1 or
ORE to save M or 6 AM.
padcast.
can be
h stronger as the

vill less of the
ouncement ement is
ous mode.
ram type ategory.
ASSICS;
; OLDIES
RS; INFO; Science;
SOCIAL; CUMENT
COINIEIN I

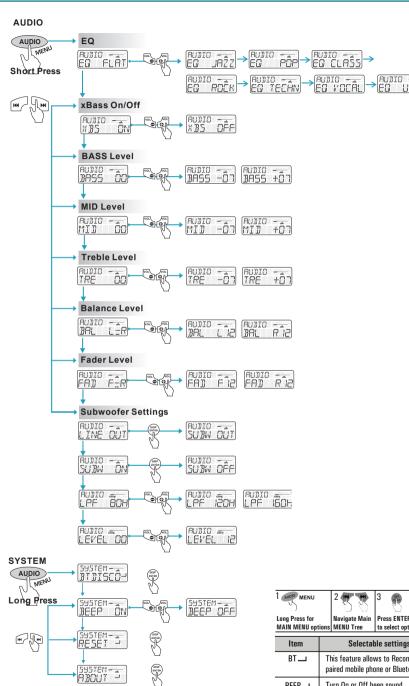

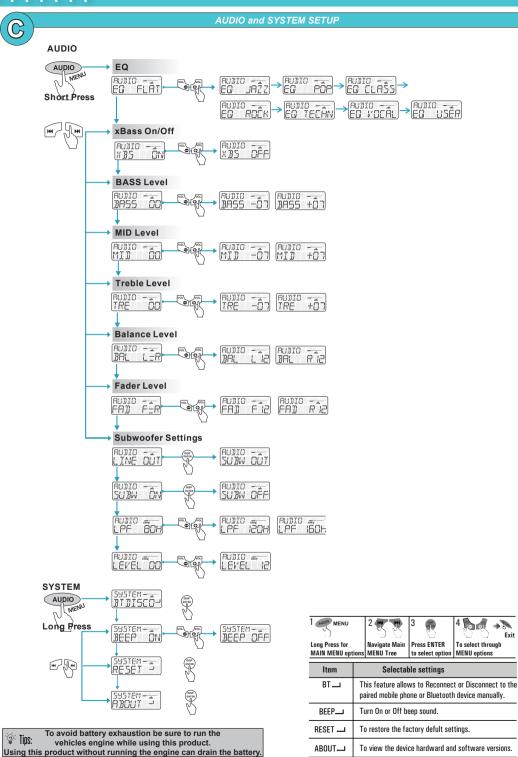



- 1) Press the SRC button to select RADIO
- 2) Press | 7 to MUTE, press again to UNMUTE
- RADIO (100 AUG) PS 10350 3) To advance stations press
 - 4) To skip previous stations press
 - 5) Press the button to display RADIO information
 - 6) Press the PRESET button to recall PRESETS 1 ~ 6

SYSTEMBT

PAIRING & DISCOVERING A NEW BLUETOOTH CONNECTION

1) Power on the MGR350B by pressing and holding down the Power button for 1 second, the Bluetooth ICON will start to flash signalling that the MGR350B is now ready for Bluetooth pairing.

NOTE: You have 2 minutes before you must restart this procedure over again.

2) Now that the MGR350B is in pairing mode:

ANDROID users:

- a. Go into the Settings Menu of your ANDROID device
- b. Enter the Bluetooth Menu and press SCAN
- c. "BOSS MGR350" will now be display under AVAILABLE DEVICES

BLUETOOTH OPERATION

d. If prompted, enter passcode: "0000"

iOS users:

- a. Go into the Settings Menu of your iOS device
- b. Enter the Bluetooth Menu
- c. "BOSS MGR350" will now be displayed
- d. If prompted, enter passcode: "0000"
- 3) If the MGR350B is not seen, repeat the above steps to refresh the "Device List"
- 4) When the BT connection is successful you will see BT CONNECTED message on the MGR350B LCD display, you are now ready to stream music from your devices favorite media player to the MGR350B



RECONNECTION

- 1) Power on the MGR350B and your last paired device Bluetooth
- 2) The unit will now automatically be reconnected
- 3) If your device was previously paired with the MGR350B, but it wasn't the last paired device:
 - a. Ensure no other devices are currently paired
 - b. Press and hold MENU button to manually connect / reconnect to the MGR350B
- 4) If the device is out of range from the MGR350B, it will disconnect automatically:
- 5)The MGR350B will reconnect to the device once in range, a confirmation message will be displayed on the LCD



MY SONGS

BLUETOOTH STREAMING MUSIC

- 1) Press the SRC button to select BT AUDIO
- 2) Press >/II to start PLAY, press again to PAUSE
- 3) To skip songs or advance tracks press , press and hold to FAST FORWARD
- 4) To select the previous track press the button | , press and hold to FAST REWIND
- 5) Press the button to display song ID3 information



USB OPERATION



- 1) Press the SRC button to select USB
- 2) Press I to start PLAY, press again to PAUSE
- 3) To skip songs or advance tracks press , press and hold to FAST FORWARD
- 4) To select the previous track press $\ensuremath{\mathbf{H}}$, press and hold to FAST REWIND









2) Press >/II to MUTE, press again to UNMUTE

1) Press the SRC button to select AUX IN



Ensure to adjust the level of your devices master volume to 75%



