





Мотор лодочный Marine Rocket MR5FH

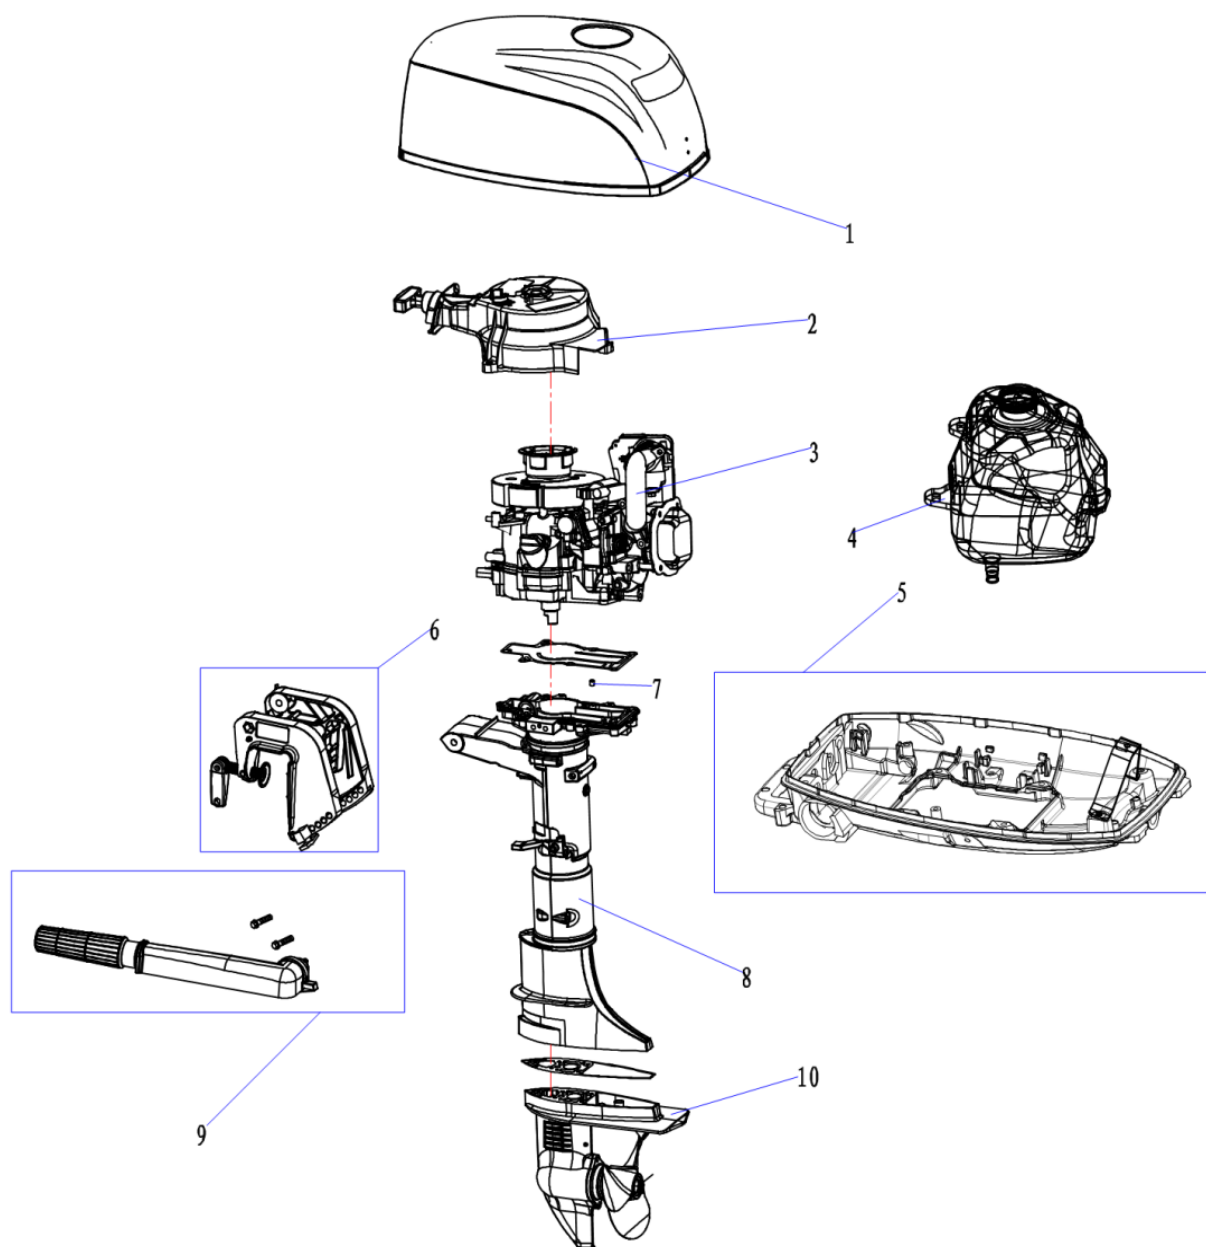


1. Узлы и блоки

NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА
1	MR030224	5F-07.00.00.00	Top cowling assy.	1	1
2	MR030117	5F-01.01.00.00	starter cover assy.	1	1
3		5F-01.01.00	Powering system	1	
4		5F-01.04.00	Fuel system	1	
5		5F-02.00.00.00	Bottom cowling assy	1	
6		F4-03.00.00.00	Bracket assy	1	
7	MR01020110BAG	15F-01.06.20	Dowel pin 6*12	2	10
8		5F-05.00.00	Upper casing assy	1	
9	MR030820	5F-04.00.00	Steering assy	1	1
10		F4-06.00.00	Lower casing driving assy	1	

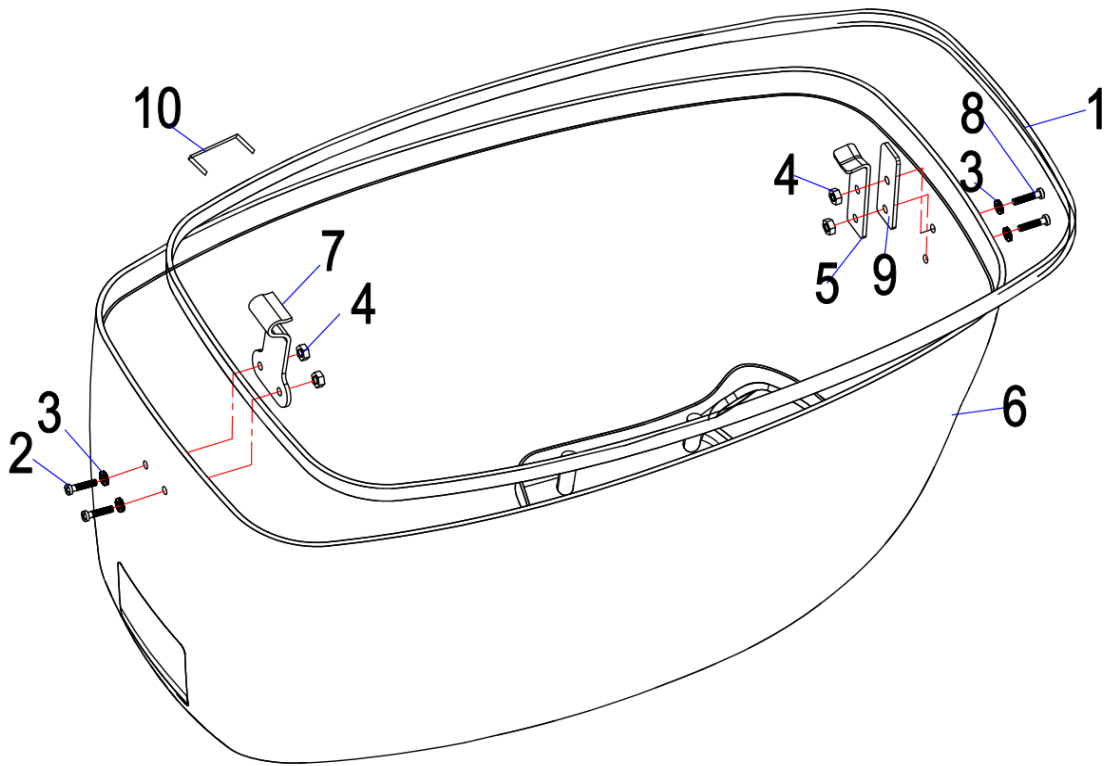


2. Капот

NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА	
1	MR01060623	9.8F-07.02	Rubber sealing strip	1	1	
2	MR0104074BAG	GB/T818	Cross recessed countersunk head screw	2	10	
3	MR0104162BAG	GB/T96	Flat gasket 4	4	10	
4	MR0104144BAG	DIN985	Bolt	4	10	
5	MR01080640	9.8F- II -07.05	Rear lock hook	1	1	
6	MR01071408	5F	Top cowling	1	1	
7	MR01080639	9.8F- II -07.03	Front lock hook	1	1	
8	MR01040748BAG	GB/T818	Pan head bolt with cross recess	2	10	
9	MR01080630	9.8F-07.08.02	Pad	1	1	
10		15F-07.07	Binding nail	20		
	MR030224	5F-07.00.00.00	Top cowling assy.	1	1	

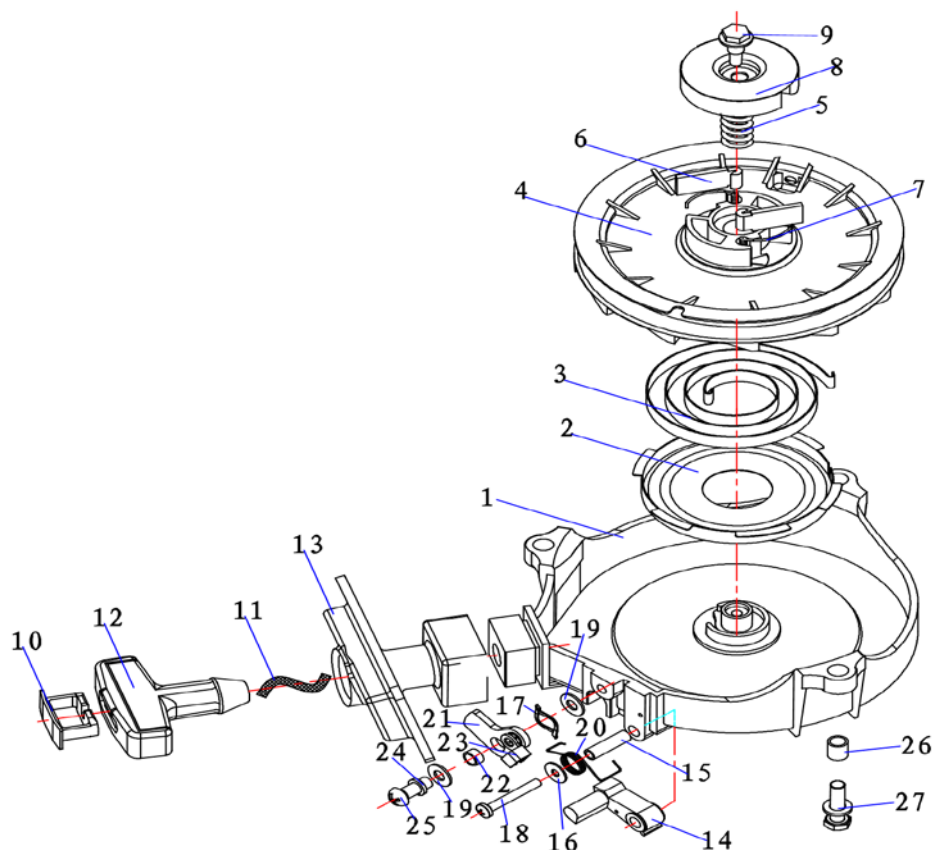

3. Ручной стартер


NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА
1	MR01071401	5F-01.02.03	statrer cover	1	1
2	MR01080602	9.8F-01.01.10	Plate,volute spring	1	1
3	MR01090603	9.8F-01.01.09	Volute spring	1	1
4	MR01070601	9.8F-01.01.07	Start wheel	1	1
5	MR01090601BAG	9.8F-01.01.05	Plate spring	1	2
6	MR010806260	9.8F-01.01.04	Drive pawl	2	1
7	MR01090602BAG	9.8F-01.01.06	Drive pawl torsion spring	2	2
8	MR01080601	9.8F-01.01.02	Starter platen	1	1
9	MR01020601	9.8F-01.01.03	Bolt	1	1
10	MR01070110BAG	15F-01.01.10	Cover,Starter handle	1	2
11	MR01100301BAG	F4-01.01.15	Start rope $\phi 3.5 \times 1800$ mm	1	2
12	MR01060103	15F-01.01.08	Starter handle	1	1
13	MR01060632	9.8F-01.01.11.01- II	Rubber bracket	1	1
14	MR01070604	9.8F-01.01.16	Brake	1	1
15	MR01020604	9.8F-01.01.17	Copper bushing	1	1
16	MR0104162BAG	GB/T96	Flat gasket 4	1	10
17	MR01080604BAG	9.8F-01.01.15	Wave gasket	1	2
18	MR01040749BAG	GB/T818	Pan head screw with cross recess	1	10
19	MR0104158BAG	GB/T848	Flat pad 6	2	10
20	MR01090604BAG	5F-01.01.18	Torsional spring,brake	1	5
21	MR01070602BAG	9.8F-01.01.12	Brake guide	1	2
22	MR01020602BAG	9.8F-01.01.14	Cushion tube	1	2
23	MR01070603BAG	9.8F-01.01.13	Linkage connector	1	2
24	MR0104154BAG	GB/T93	Spring Washer	1	10
25	MR01040831BAG	GB/T818	Pan head bolt with cross recess	1	10
26	MR01021402	5F-01.02.06	Cushion tube,recoil starter	3	1
27	MR0104407BAG	GB9074.1 M6*25	Hexagonal bolt & flat gasket assy M6*25	3	10
	MR030117	5F-01.01.00.00	starter cover assy.	1	1

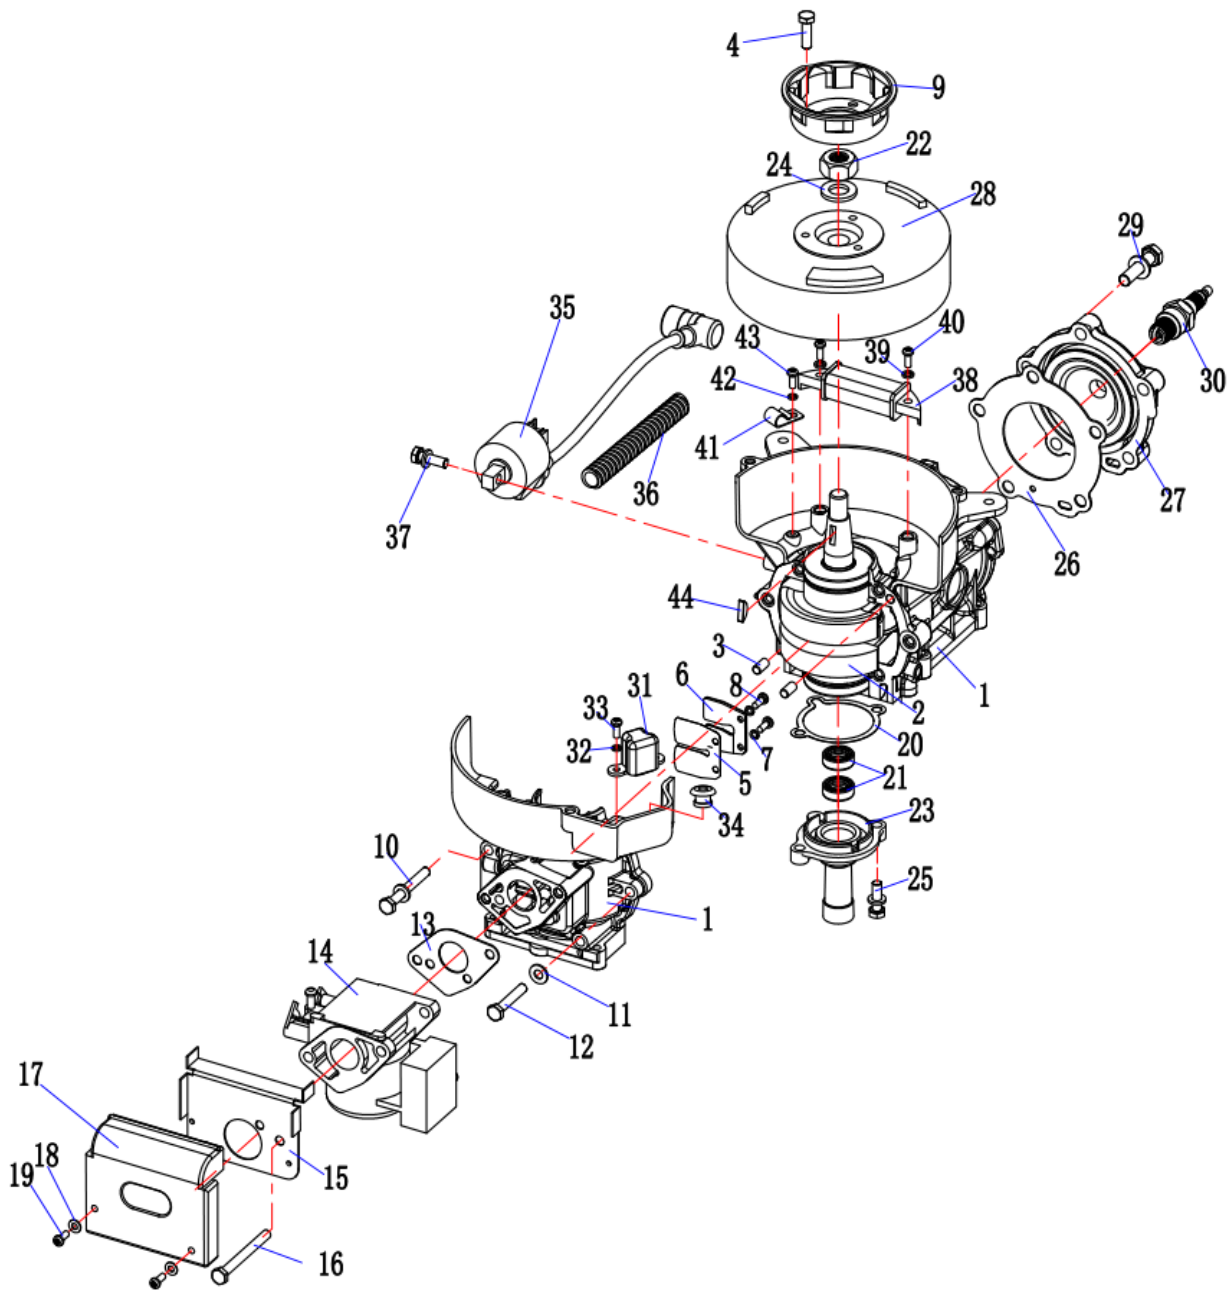

4. Блок двигателя


NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА
1	MR01011402	5F-01.01.03.00	Crankcase assy	1	1
2		5F-01.01.02.00	Crank connecting rod comp.	1	
3	MR01020110BAG	15F-01.06.20	Locating Pin 2*6	2	10
4	MR0104008BAG	GB/T5783	Hex Head Bolt M6*12	3	10
5	MR01081402BAG	5F-01.01.04.03	Valve	1	2
6	MR01081401BAG	5F-01.01.04.02	Inlet valve base	1	2
7	MR0104152BAG	GB/T93	Spring washer 4	2	10
8	MR0104226BAG	GB/T818	Pan head bolt with cross recess M4*10	2	10
9	MR01080605	9.8F-01.01.20	Starter pulley	1	1
10	MR01044230BAG	GB9074.1 M6*55(10.9)	Hexagonal bolt & flat gasket assy M6*55	4	10
11	MR0104171BAG	GB97.1 M6	Flat gasket	2	10
12	MR0104317BAG	GB5783 M6*35(10.9)	Hexagonal bolt & flat gasket assy M6*35	2	10
13	MR01051412BAG	5F-01.04.07	Carburetor seal gasket	1	2
14	MR01051413	5F-01.04.08.00	Carburetor assy	1	1
15	MR010814030	5F-01.04.10	Air filter base	1	1
16	MR0104023BAG	GB/T5782	Hexagonal bolt M6*85	2	10
17	MR01071402	5F-01.04.09	Air filter cap	1	1
18	MR0104169BAG	GB/T97.1	Flat gasket	2	10
19	MR010407409BAG	GB/T818	Screw M4*18	2	10
20	MR01051409BAG	5F-01.01.08	Gasket,oil seal casing	1	2
21	MR01050309	F4-01.06.15.03	Oil seal B10.8*21*7	2	1
22	MR01080638BAG	9.8F-01.03.04	Flying wheel nut	1	2
23	MR01011405	5F-01.01.07.01	Oil seal housing	1	1

24	MR0104173BAG	GB/T97.1	Flat gasket 12	1	10	
25	MR0104406BAG	GB9074.1 M6*20	Flat gasket&Bolt	2	10	
26	MR01051408	5F-01.01.06	Cylinder gasket	1	1	
27	MR01011404	5F-01.01.05	Cylinder head	1	1	
28	MR01031405B	5F-01.03.13	Flying wheel assy	1	1	
29	MR01044252	GB9074.1(9.8)M8*35	Hexagonal bolt & flat gasket assy M8*35	5	1	
30	MR01030309	BPR7HS	Spark Plug	1	1	
31	MR01031401	5F-01.03.02	Impulsor assy	1	1	
32	MR0104152BAG	GB/T93	Spring washer 4	2	10	
33	MR0104073BAG	GB/T818	Screw M4*12	2	10	
34	MR01061407BAG	5F-01.03.11	Rubber bushing	1	10	
35	MR01031403B	5F-01.03.05	Ignition coil	1	1	
36	MR01101434		Bellows $\phi 7^* \phi 10^* 280$	1	1	
37	MR0104406BAG	GB9074.1 M6*20	Flat gasket&Bolt	2	10	
38	MR01031402B	5F-01.03.03	Charging coil assy	1	1	
39	MR0104153BAG	GB/T93	Spring washer	2	10	
40	MR010410309BAG	GB/T823	Pan head bolt with cross recess M5*20	2	10	
41	MR01081104BAG	40F-01.03.08.07	Wire fixer	1	2	
42	MR0104162BAG	GB/T96	Flat gasket 4	1	10	
43	MR0104217BAG	GB/T818	Pan head bolt with cross recess M4*8	1	10	
44	MR01100602BAG	9.8F-01.06.27	Woodruff key,Crankshaft	1	2	

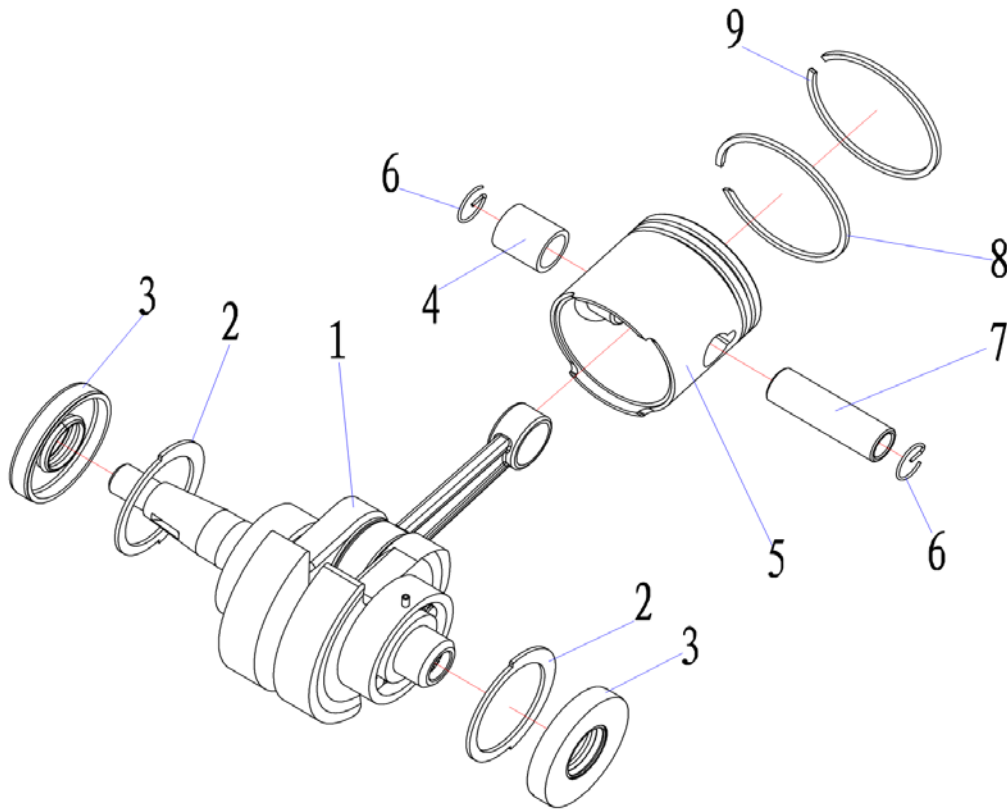

5. Коленвал


NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА
1	MR01051402	5F-01.01.11.00	Crankshaft assy	1	1
2	MR01081403BAG	5F-01.01.10	Stop collar,Crankshaft	2	2
3	MR01051410	5F-01.01.11	Oil seal,Crankshaft 20*47*8	2	1
4	MR01051405	5F-01.01.02.05	Needle roller bearing	1	1
5	MR01051403B	5F-01.01.02.02	Piston	1	1
6	MR01050626BAG	9.8F-01.06.25	Piston circlip	2	10
7	MR01051401	5F-01.01.02.03	Piston pin	1	1
8	MR01051407	5F-01.01.02.07	2nd ring	1	Sell by pair
9	MR01051406	5F-01.01.02.06	1nd ring	1	

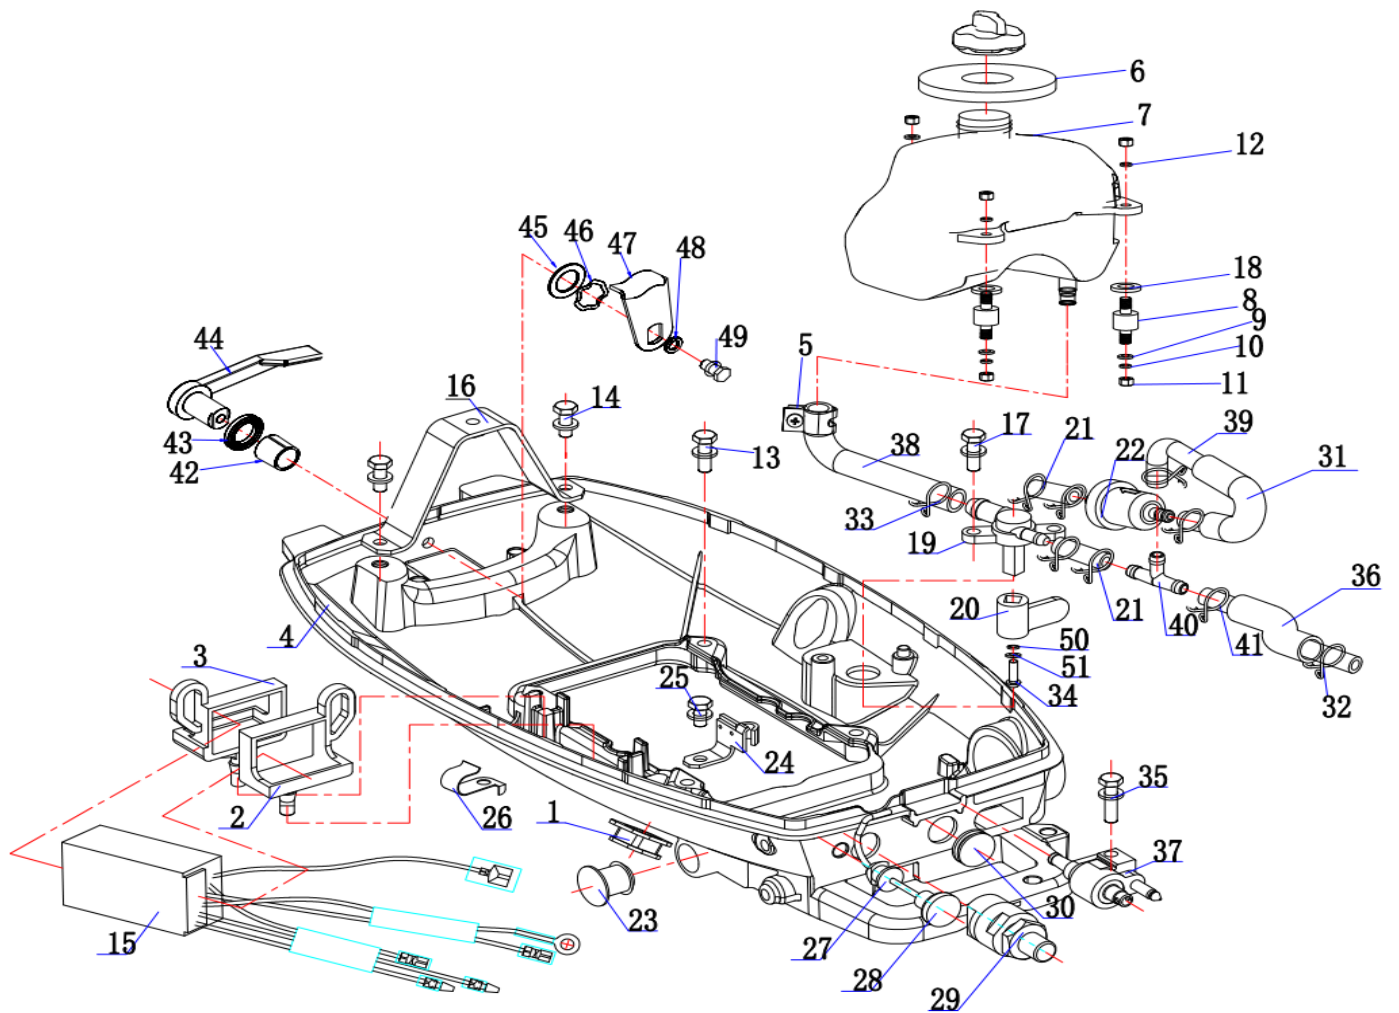

6. Поддон


NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА	
1	MR01061411	5F-02.07	Protecting bush,brake linkage	1	1	
2	MR01061403BAG	5F-01.03.09	Rubber bracket (R)	1	2	
3	MR01061402BAG	5F-01.03.08	Rubber bracket (L)	1	2	
4	MR090501011406	5F-02.01	Bottom Base	1	1	
5	MR01080911BAG	3.5F-01.04.05.00	Clamp assy.	1	2	
6	MR01061401	3.5F-01.04.12	Damper ring,reservoir port	1	1	
7	MR01071404	3.5F-01.04.11.00	Fuel tank assy	1	1	
8	MR01061404	5F-01.04.02	Fuel tank damper assy	3	1	
9	MR0104171BAG	GB97.1	Flat gasket	2	10	
10	MR0104154BAG	GB93	Spring Washer	2	10	
11	MR0104146BAG	DIN985 M6	hexagon nylon lock nut	5	10	
12	MR0104175BAG	GB5287	Flat gasket 6	3	10	
13	MR0104407BAG	GB9074.1 M6*25	Hexagonal bolt & flat gasket assy M6*25	3	10	
14	MR0104404BAG	GB9074.1 M6*16	Bolt	2	10	
15	MR01031404B	5F-01.03.07	CDI assy	1	1	
16	MR01081404	5F-01.04.01	Fuel tank holder	1	1	
17	MR0104406BAG	GB9074.1 M6*20	Flat gasket&Bolt	1	10	
18	MR01080152BAG	15F-01.01.25	start cover gasket	3	2	
19	MR01050332	F4-01.07.05.00	Fuel switch assy	1	1	
20	MR01070314BAG	F4-01.07.05.01	Fuel cock knob	1	2	
21	MR01061414		Fuel hose 5*10*30	2	1	
22	MR01070518	F9.9-01.04.03.00	Fuel filter assy	1	1	
23	MR01061409BAG	5F-02.03	Plug B	1	2	
24	MR01081405	5F-02.06.00	Throttle cable holder	1	1	
25	MR0104403BAG	GB9074.1 M6*12	Bolt	1	10	
26	MR01080210BAG	F15-01.03.00.42	fix clip,air breather tube	1	5	
27	MR01060608BAG	9.8F-02.04	Choke rod sheath	1	2	
28	MR01071405	5F-02.05.00	Handle,chock	1	1	
29	MR01101401	5F-01.03.12	emergency stop switches assy	1	1	
30	MR01061408BAG	5F-02.02	Plug A	1	2	
31	MR01101431BAG		Bellows (14*60)	1	2	

32	MR01090139BAG	F4-01.07.07	Clamp φ10	8	10	
33	MR01090141BAG	F4-01.07.04	Clamp φ14	1	10	
34	MR0104074BAG	GB/T818	Cross recessed countersunk head screw	1	10	
35	MR0104406BAG	GB9074.1 M6*20	Flat gasket&Bolt	1	10	
36	MR01101430BAG		Bellows (14*80)	1	2	
37	MR01100106	15F-01.07.01.00	Fuel hose joint assy	1	1	
38	MR01061405BAG	5F-01.04.04	L shape fuel hose	1	2	
39	MR01060711BAG	F6-01.04.00.09	Manual pump fuel hose	1	2	
40	MR01070226BAG	F15-05.00.00.17	T-branch pipe	1	2	
41	MR01061419BAG		Fuel hose 6*10*115	1	5	
42	MR01070616BAG	9.8F-02.11.03	Bushing	1	2	
43	MR01060612BAG	9.8F-02.11.02	Rubber ring	1	2	
44	MR090601010615	9.8F-02.11.01	Front lock handle	1	1	
45	MR01070617BAG	9.8F-02.11.04	Gasket	1	2	
46	MR01080617BAG	9.8F-02.11.05	Wave gasket	1	2	
47	MR01080618	9.8F-02.11.06	Lock plate	1	1	
48	MR0104164BAG	GB/T96	Flat gasket	1	10	
49	MR0104403BAG	GB9074.1 M6*16	Bolt	1	10	
50	MR0104154BAG	GB93 M6	Spring Washer	1	10	
51	MR0104164BAG	GB96 M6	Flat gasket	1	10	

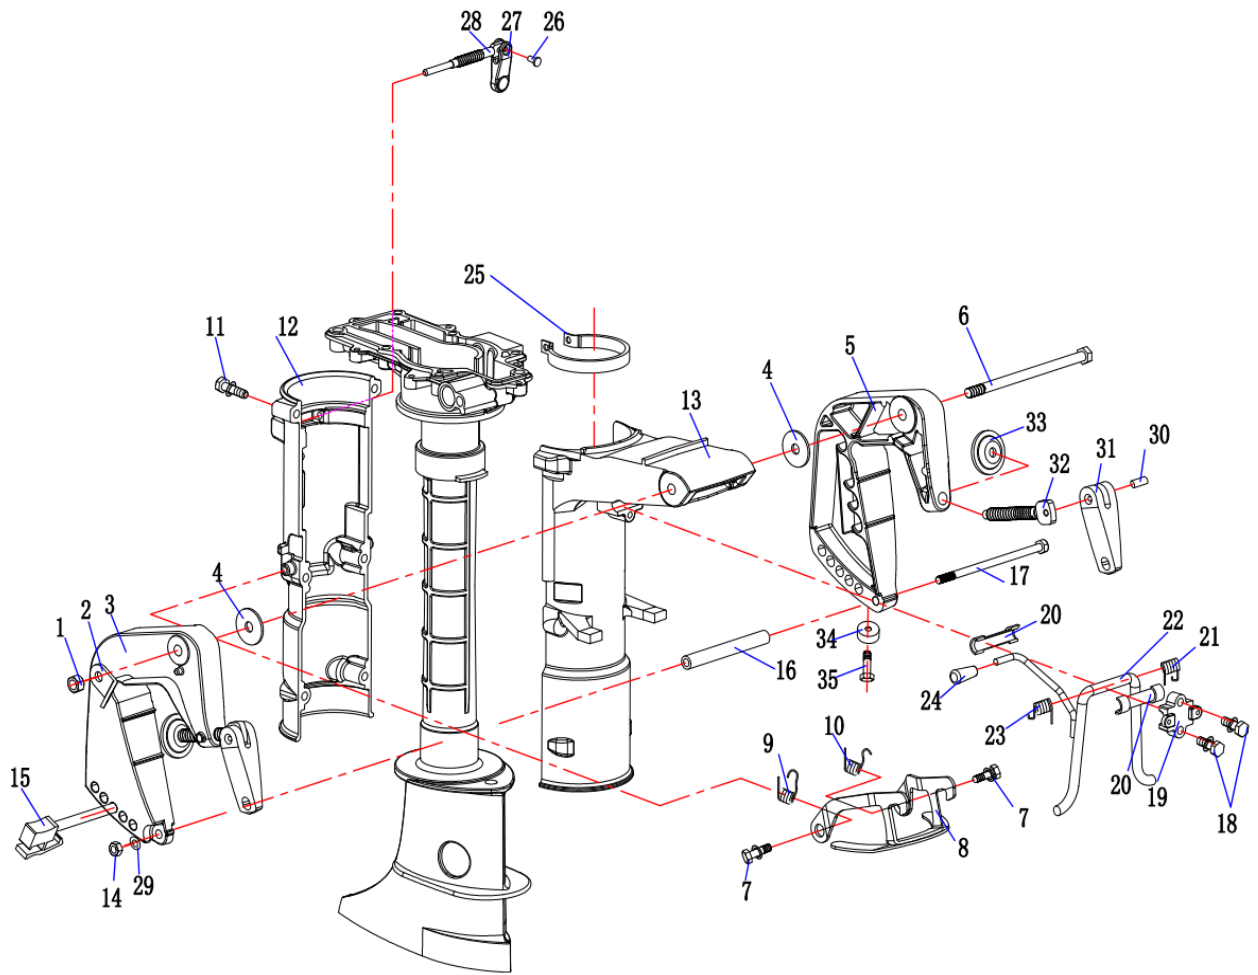


7. Струбцины, дейдвуд

NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА
1	MR0104147BAG	DIN985	Hexagon nylon lock nut	1	10
2	MR01080314BAG	F4-03.02	Orifice plate	1	2
3	MR092201010308	F4-03.01.01	Clamp bracket (left)	1	1
4	MR01070325BAG	F4-03.03	Nylon gasket	2	2
5	MR092201010309	F4-03.01.02	Clamp bracket (right)	1	1
6	MR0104049BAG	GB/T5783	Hexagonal bolt M8*135	1	5
7	MR0104402BAG	GB9074.1 M6*10	Hexagonal bolt & flat gasket assy M6*10	2	10
8	MR01080316	F4-03.05.08.00	Tilt lock hook assy	1	1
9	MR01090314BAG	F4-03.05.08.04	Tension spring,locking hook B	1	2
10	MR01090313BAG	F4-03.05.08.03	Tension spring,locking hook(A)	1	2
11	MR0104409BAG	GB9074.1 M6*35	Hexagonal bolt & flat gasket assy M6*35	6	10
12	MR092201010312	F4-03.05.04	Cap,swivel bracket	1	1
13	MR092201010310	F4-03.05.01	Bracket,swivel	1	1
14	MR0104138BAG	GB6170	Hex Nut M6	1	10
15	MR01090328	F4-03.05.07.00	Angle adjusting pin	1	1
16	MR01020312	F4-03.04	bolt cushion tube	1	1
17	MR0104027BAG	GB/T5783	Hexagonal bolt M6*120	1	10
18	MR0104406BAG	GB9074.1 M6*20	Flat gasket&Bolt	2	10
19	MR01010311	F4-03.05.03	pressure plate,adjusting bracket	1	1
20	MR01070326BAG	F4-03.05.02.05	Antifriction pad	2	2
21	MR01090312BAG	F4-03.05.02.04	Torsional spring(B)	1	5
22	MR01080315	F4-03.05.02.01	Angle adjusting bracket	1	1
23	MR01090311BAG	F4-03.05.02.03	Torsional spring(A)	1	5
24	MR01060322BAG	F4-03.05.02.02	Handle rubber sleeve	1	2
25	MR01060323	F4-03.05.05.00	Lock washer assy	1	1
26	MR01041979BAG	GB/T875-86	Thin flat head socket shank rivet	1	10
27	MR01070327BAG	F4-03.05.06.01	Lock handle	1	2
28	MR01020313	F4-03.05.06.02	Lock screw	1	1
29	MR0104171BAG	GB/T97.1	Flat gasket	1	10
30	MR0104199BAG	GB/T1015	Rivet	2	10
31	MR01070140BAG	15F-03.05.02.04	Clamping handle	2	2
32	MR01020311	F4-03.01.03	Clamp bolt	2	1
33	MR01080118BAG	15F-03.05.02.03	Clamp plate	2	2
34	MR01051845	F25EI-01.03.00.26	Anode	1	1
35	MR0104003BAG	GB/T5783	Bolt	1	10

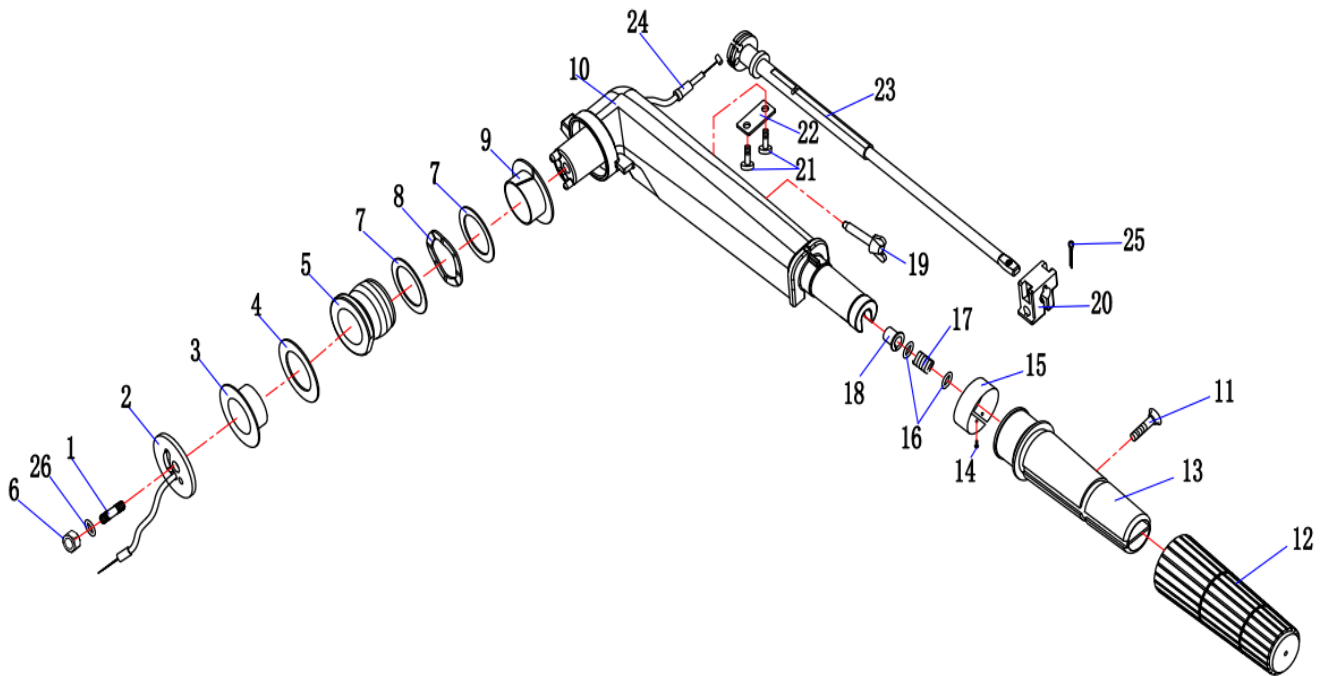

8. Румпель


NO.	КОД МР	КОД ОЕМ	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА
1	MR01020125BAG	15F-04.07.02	Double screw bolt (short)	1	2
2	MR01080318	F4-04.03	Steering handle plate	1	1
3	MR01070329BAG	F4-04.04	Friction ring A	1	2
4	MR01080319BAG	F4-04.05	Gasket A	1	2
5	MR01060324	F4-04.01.02.00	Handle damping ring Assy	1	1
6	MR0104147BAG	DIN985 M8	Hexagon nylon lock nut	1	10
7	MR01080320BAG	F4-04.07	Gasket B	2	2
8	MR01080321BAG	F4-04.08	Wave Washer	1	2
9	MR01070330BAG	F4-04.06	Friction ring B	1	2
10	MR090501011407	5F-04.01	Steering handle	1	1
11	MR0104117BAG	GB/T820	Screw M5*25	1	10
12	MR01060124	15F-04.07.14	Handle Rubber sleeve	1	1
13	MR01070154	15F-04.07.13	Handle	1	1
14	MR010408809BAG	GB/T845	Screw	1	10
15	MR01100366BAG	F4-04.11- II	Indicator,throttle	1	2
16	MR0104160BAG	GB/T848	Flat Pad 10	2	10
17	MR01090124BAG	15F-04.07.11	Spring	1	2
18	MR01070153BAG	15F-04.07.12	Bushing	1	2
19	MR01020126	15F-04.07.09	Resistance adjustment knob	1	1
20	MR01070152BAG	15F-04.07.08	locking segment	1	5
21	MR0104077BAG	GB/T818	Screw M5*12	2	10
22	MR01080131BAG	15F-04.07.07	Throttle lever plate	1	2
23	MR01070151	15F-04.07.05	Throttle Lever	1	1
24	MR01101402	5F-04.02	Throttle cable	1	1
25	MR01041850BAG	GB/T91	Cotter pin 1.6*12	1	10
26	MR010417109BAG	GB97.1 M8	Flat gasket	1	10
	MR030820	5F-04.00.00	Tiller Assy.	1	1

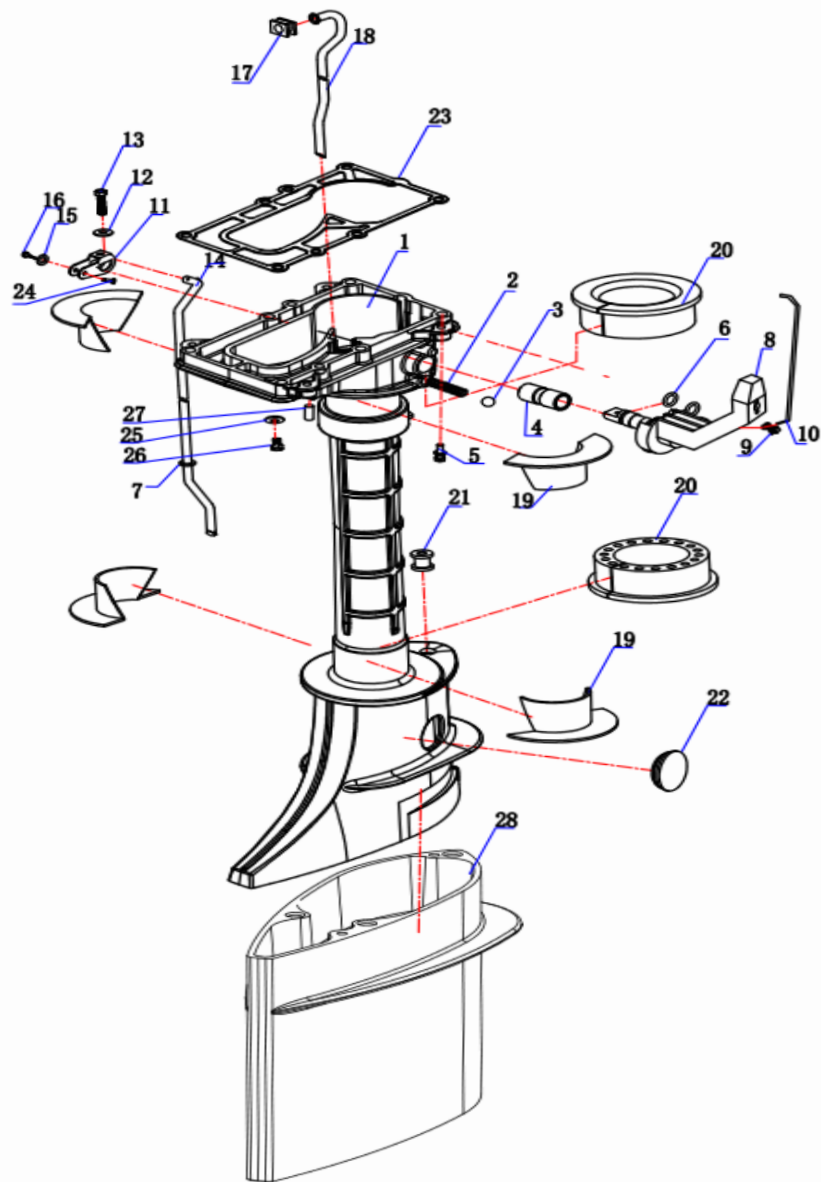

9. Проставка, выхлоп

NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА	
1	MR090501011408	5F-05.02.01	Upper casing	1	1	
2	MR01090315BAG	F4-05.04	Pressure Spring	1	2	
3	MR0104204BAG	F4-05.03	Steel Ball 8	1	2	
4	MR01021405	5F-05.02.02	Shift axis sleeve	1	1	
5	MR0104408BAG	GB9074.1 M6*30	Bolt	6	10	
6	MR01060327BAG	F4-05.02.03	O ring	2	10	
7	MR0104171BAG	GB/T97.1	Flat gasket	1	10	
8	MR01071406	5F-05.03.00	Gear shift handle assy	1	1	
9	MR01070603BAG	9.8F-01.01.13	Linkage connector	1	2	
10	MR01091408	5F-05.07	Protecting bush,brake linkage	1	1	
11	MR01081406	5F-05.04	Gear shift bracket	1	1	
12	MR0104152BAG	GB/T93	Spring washer 4	1	10	
13	MR010400101BAG	GB/T5783	Hexagonal bolt M4*16	1	10	
14	MR01091406	5F-05.05	Gear shift rod	1	1	
15	MR0104169BAG	GB/T97.1	Flat gasket	1	10	
16	MR010418309BAG	GB/T91	Cotter pin 1*10	1	10	
17	MR01060329BAG	F4-05.13	Seal ring(upper),hose	1	2	
18	MR01101403	5F-05.01	Hose (S)	1	1	
	MR011014227	5F-05.01-L	Hose (L)	1	1	
19	MR01070333BAG	F4-05.08	Shock ring bushing	4	2	
20	MR01060328	F4-05.09	Shock ring	2	1	
21	MR01060325BAG	F4-05.01.03	Sealer	1	2	

22	MR01060326BAG	F4-05.01.04	Plug,upper casing	1	2	
23	MR01051404	5F-01.01.01	Engine gasket	1	1	
24	MR01021407BAG	5F-05.06	Pin,gear shift linkage	1	2	
25	MR01080139BAG	15F-06.01.04	Gasket	1	10	
26	MR01040311BAG	GB/T5783	Hexagonal bolt M8*10	1	10	
27	MR01021401	5F-05.08	Water hose(outlet)	1	1	
28	MR092201010321	F4-08.01	connecting block	1	1	

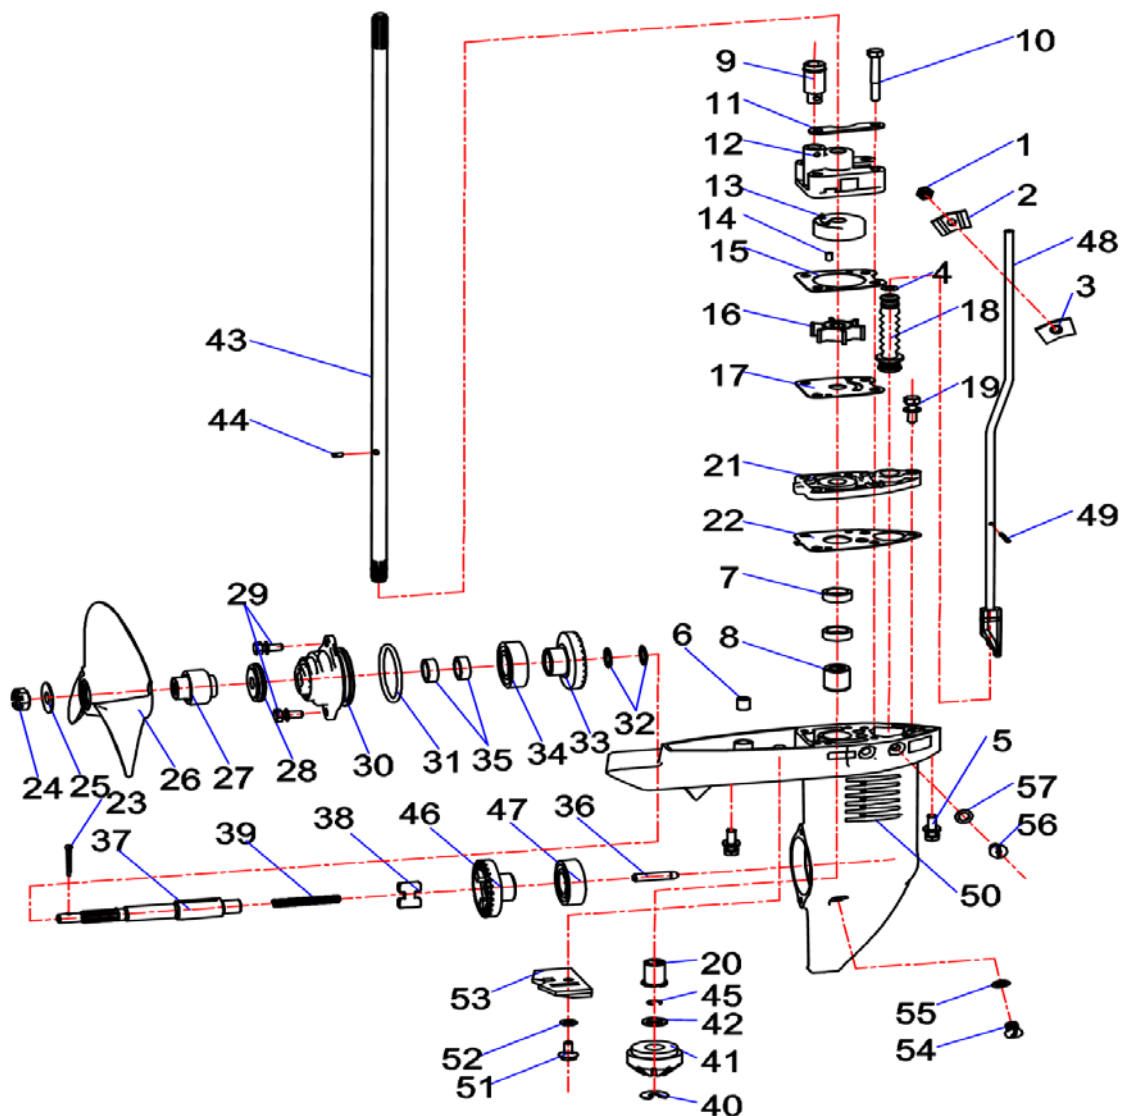

10. Редуктор

NO.	КОД MR	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА
1	MR0104406BAG	GB9074.1 M6*20	Flat gasket&Bolt	1	10
2	MR01050350	F4-06.22	Shift cam locker B	1	1
3	MR01050351	F4-06.23	Shift cam locker A	1	1
4	MR01090317BAG	F4-06.16	Spring,rubber ring	1	2
5	MR0104410BAG	GB9074.1 M6*40	Bolt	2	10
	MR0104031BAG	GB5783 M6*165	Bolt M6*165	2	5
	MR0104158BAG	GB848 M6	Flat pad 6	2	10
6	MR01020307BAG	F4-06.27	Dowel pin	2	2
7	MR01050309	F4-01.06.15.03	Oil seal B10.8*21*7	2	1
8	MR01050336	F4-06.01.03	Bearing	1	1
9	MR01060333BAG	F4-06.21.04	Water hose seal ring(lower)	1	2
10	MR0104017BAG	GB/T5783	Hexagonal bolt M6*45	4	10
11	MR01080329	F4-06.20	Plate,water pump	2	1
12	MR01070342	F4-06.21.01	Water pump housing	1	1
13	MR010803390	F4-06.21.02	Water pump inner housing	1	1
14	MR01020316BAG	F4-06.19	Water Pump Locating Pin	2	10
15	MR01050349BAG	F4-06.18	Gasket,water pump	1	2
16	MR01060332	F4-06.21.03.00	Impeller assy	1	1
17	MR01080328	F4-06.17	Plate,water pump	1	1
18	MR01060331BAG	F4-06.15	Rubber seal strip	1	2
19	MR0104407BAG	GB9074.1 M6*25	Hexagonal bolt & flat gasket assy M6*25	1	10
20	MR01050337	F4-06.01.04	Bearing	1	1
21	MR01010319	F4-06.14	Water pump base	1	1
22	MR01050348BAG	F4-06.13	Gasket,water pump base	1	2

23	MR0104189BAG	GB91	Cotter Pin 2.5*20	1	10	
24	MR01020318	F4-06.26	Slot Hex Nut M8	1	1	
25	MR0104165BAG	GB/T96.1-2000	Flat gasket	1	10	
26	MR01010320	F4-06.25.01	Propeller (7-1/2*7)	1	1	
	MR030303	F4-06.25.00.00	Propeller Assy.	1	1	
27	MR01060334	F4-06.25.02.00	Propeller Internal Spine Assy	1	1	
28	MR01020317	F4-06.24	Propeller pad	1	1	
29	MR0104405BAG	GB9074.1 M6*18	hexagon headed bolt and flat plate M6*18	2	10	
30	MR092201010318	F4-06.07.01	Cap,lower casing	1	1	
31	MR01060330	F4-06.07.03	O ring,lower casing (47.5*3.5)	1	1	
32	MR01080325BAG	F4-06.05	Gasket	1	2	
33	MR01050344A	F4-06.06	Reverse gear	1	1	
34	MR01050534	F9.9-06.00.00.15	Bearing 6004C2	1	1	
35	MR01050345	F4-06.07.02	Oil Seal 22*13*7	2	1	
36	MR01020343BAG	F4-06.04.04	Gear shift plunger	1	2	
37	MR01050340	F4-06.04.01	Propeller shaft	1	1	
38	MR01050342	F4-06.04.03	Dog clutch	1	1	
39	MR01090341BAG	F4-06.04.02	Compression spring	1	2	
40	MR0104179CBAG	GB896.6	Circlip	1	10	
41	MR01050346A	F4-06.08	Driving wheel	1	1	
42	MR01080326BAG	F4-06.09	Adjuster,driving wheel	1	5	
43	MR01051414	5F-06.00.01-S	Drive shaf (short shaft)	1	1	
	MR01051415	5F-06.00.01-L	Drive shaf (long shaft)	1	1	
44	MR01020319BAG	F4-06.11.03	Stop pin,drive shaft	1	5	
45	MR01090316BAG	F4-06.11.02	Circlip	1	10	
46	MR01050339A	F4-06.03	Forward gear	1	1	
47	MR01050534	F9.9-06.00.00.15	Bearing 6004C2	1	1	
48	MR01091402	5F-06.01.00-S	Shift cam assy.(S)	1	1	
	MR01091404	5F-06.01.00-L	Shift cam assy.(L)	1	1	
49	MR0104192BAG	GB879	Pin (2.5*20)	1	10	
50	MR092201010316	F4-06.01.01	Lower casing	1	1	
51	MR0104008BAG	GB/T5783	Hex Head Bolt M6*12	1	10	
52	MR0104155BAG	GB/T861.1	Washer,inner gear	1	10	
53	MR01010317	F4-06.02	Anode	1	1	
54	MR01020128BAG	15F-06.01.03	plug,straight screw	3	2	
55	MR01080139BAG	15F-06.01.04	Gasket	3	10	
	MR030520	5F(S)-06.00.00.00	lower unit(short)	1	1	
	MR030532	5F(L)-06.00.00.00	lower unit(long)	1	1	

11. Аксессуары

NO.	КОД MR	CODE	КОД OEM	НАИМЕНОВАНИЕ	ШТ	УПАКОВКА	
1	MR01020128BAG	01020128	15F-06.01.03	thread plug, straight screw	1	2	
2	MR0104189BAG	0104189	GB91 2.5*20	cotter pin	1	10	
3	MR01060332	01060332	F4-06.21.03.00	impeller Assy.	1	1	
4	MR01070168BAG	01070168	15F-09.01	emergency starting handle	1	2	
5	MR01080139BAG	01080139	15F-06.01.04	thread plug seal gasket	2	10	
6	MR01100103	01100103	15F-01.01.22	starter rope	1	1	
7	MR01100134	01100134	15F-09.00	toolkit	1	1	
8	MR011403300	011403300		munal (client)	1	1	